




**1. Remove the engine cover**

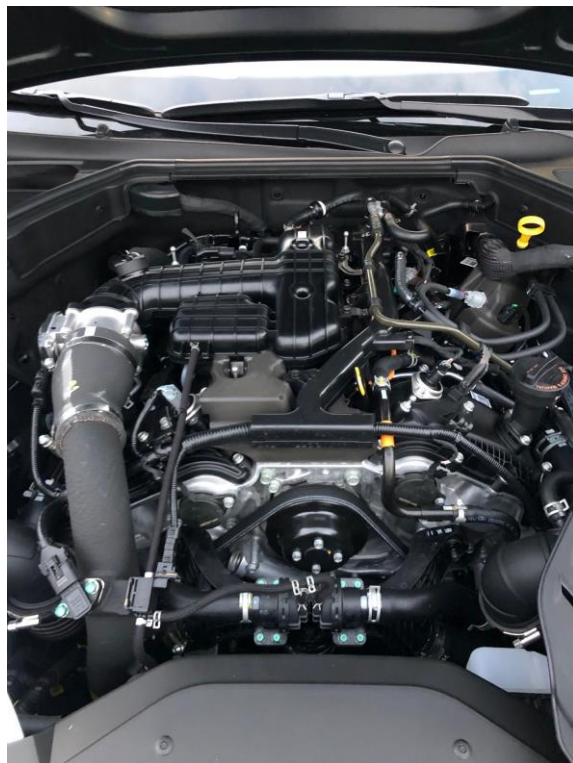

## 2. Locate the pcv line




**3. Unplug hose from the top**



**4. Connect fitting to the line**



**5. Connect the small hose to the fitting**

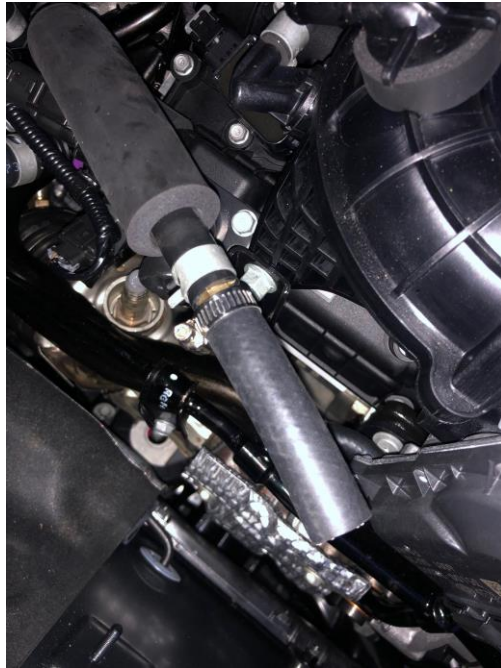

**6. Connect the longer hose to the top**



- 7. Connect the smaller hose to the “IN” side of the catch can**
- 8. Connect the bigger hose to the “OUT” side of the catch can**



- 9. Locate the two extruding bolts to attach bracket**



**10. Use provided nuts to attach bracket**



**11. Mount catch can on bracket**

