


**1-Remove Engine Cover**

**2-Remove Plug from Bracket**

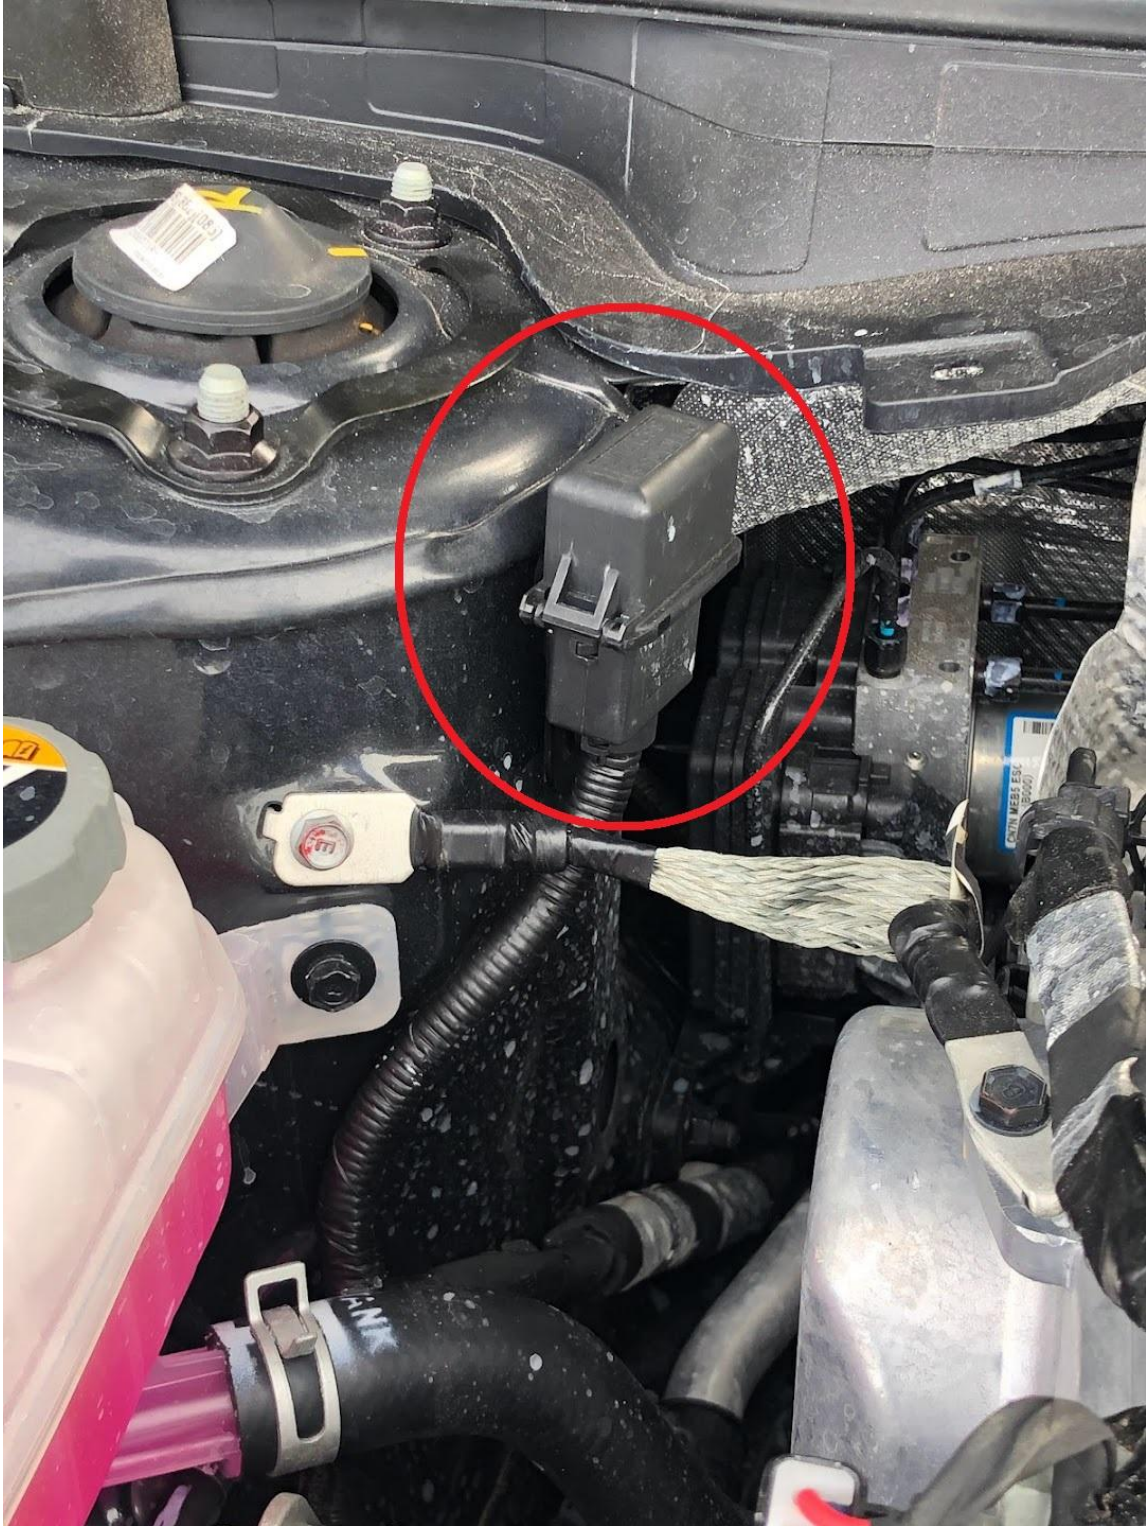

### 3-Relocate behind coolant reservoir




#### 4- Insert Catch can Bracket onto Oem Bracket



## 5- Disconnect small hose



## 6- Insert Fitting into small hose

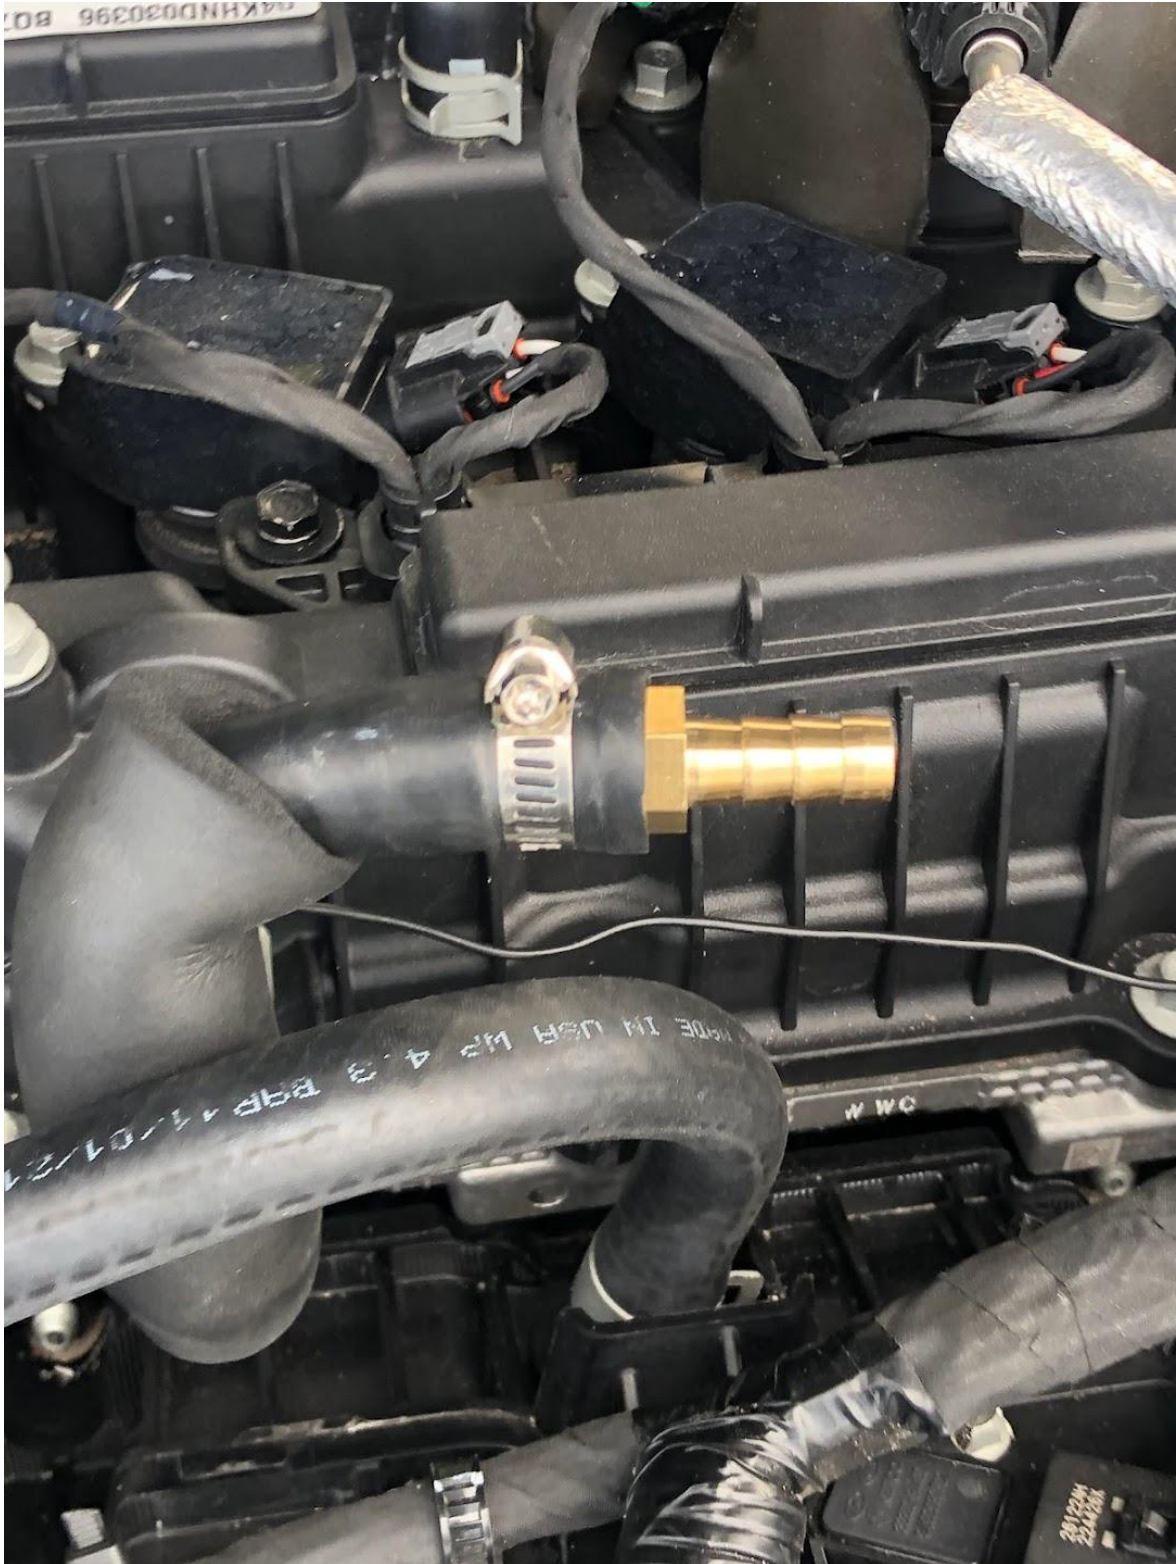



- 7- Connect small hose to the IN side of the catch can
- 8- Connect the OUT directly into the engine
- 9- Bolt in Catch Can to Bracket

